


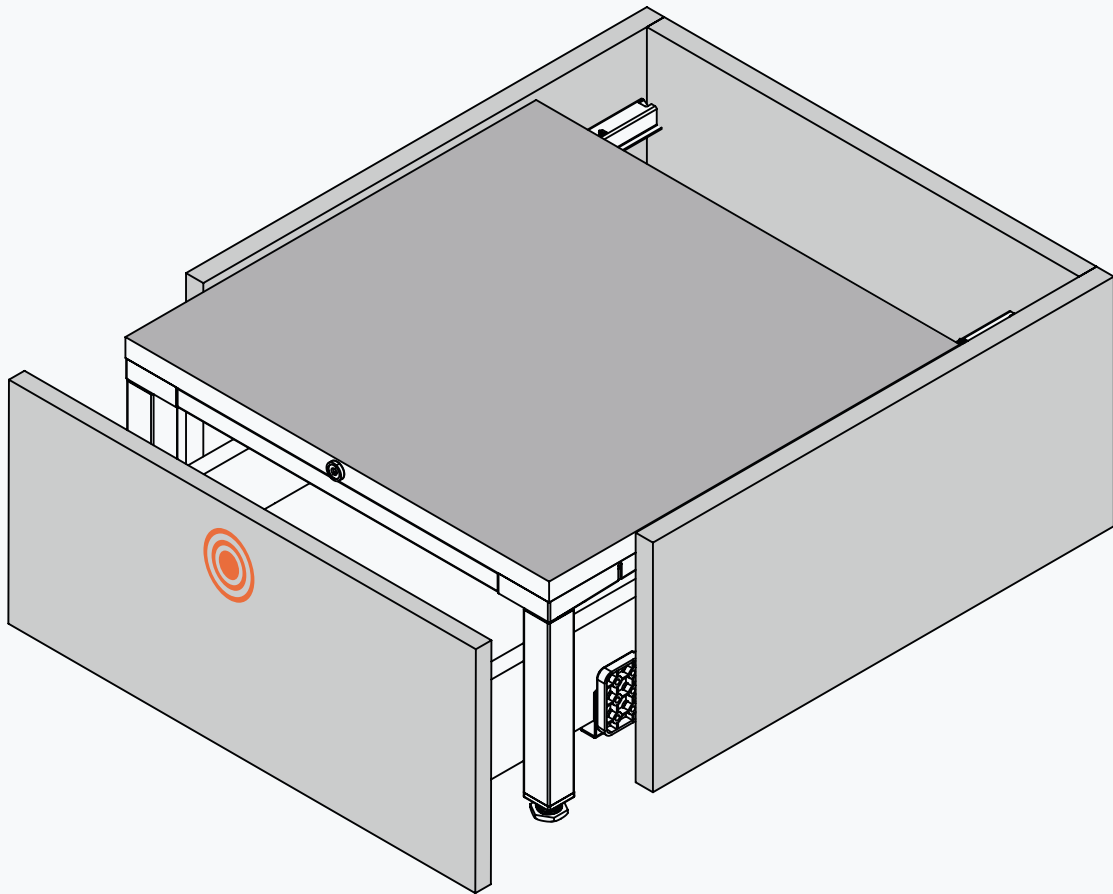


KICK STEP



Kick step and drawer box specifications


i The * asterisk number for 19mm runner thickness

Front view

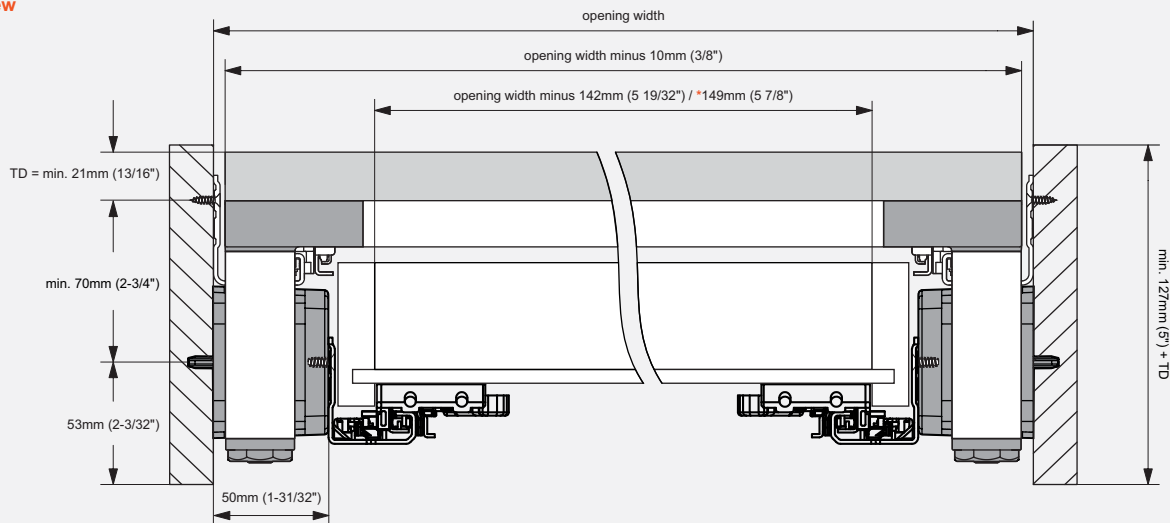

i The * asterisk number for 19mm runner thickness

Runner mounting specifications

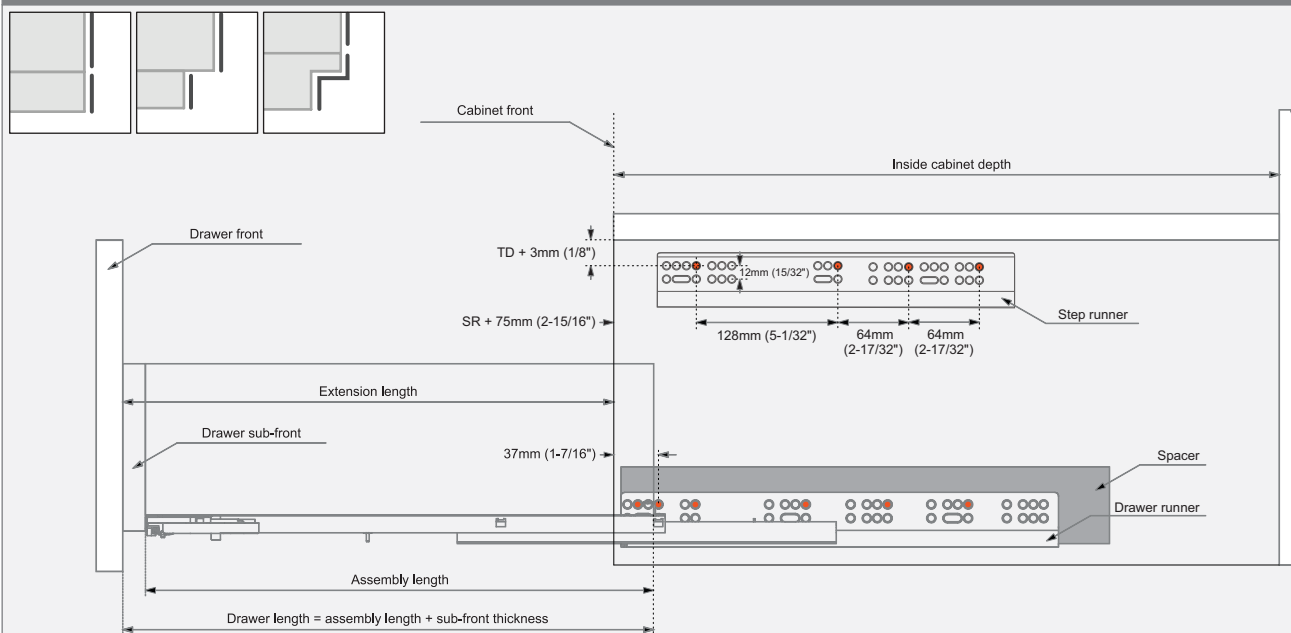

i SR= Toe kick recess

i TD = Step board thickness (including anti-slip material)


Kick step and drawer runner recommendations

Step SKU number	Material thickness	Recommended runner SKU number	Nominal length	Runner length	Assembly length	Extension length	Inside cabinet depth Minimum
TCH-23600 NI410	16mm (5/8")	TCH-23403.S 16.381.3D	381mm (15")	386mm (15-3/16")	365mm (14-3/8")	353mm (13-7/8")	406mm (16")
	19mm (3/4")	TCH-23403.S 19.381.3D					
TCH-23600 NI460	16mm (5/8")	TCH-23403.S 16.457.3D	457mm (18")	462mm (18-3/16")	441mm (17-3/8")	429mm (16-7/8")	482mm (19")
	19mm (3/4")	TCH-23403.S 19.457.3D					

Kick Step Using Slim Metal Drawer System


LVL-1 Specifications

Runner and spacer dimensions

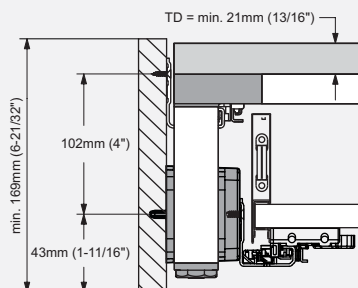


i TD = Step board thickness (including anti-slip material)

Front panel dimensions for screw-on installation

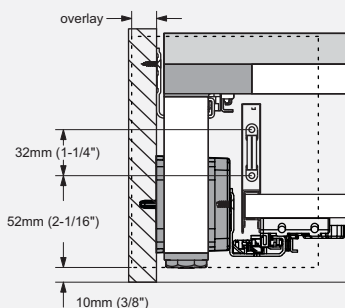


Front panel drilling dimensions for press-in dowels

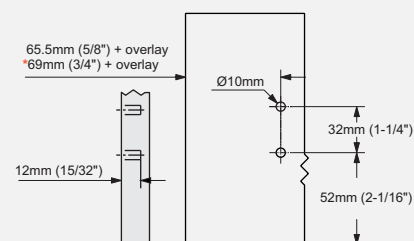

i The * asterisk number for 19mm runner thickness


LVL-2 Specifications

Runner and spacer dimensions

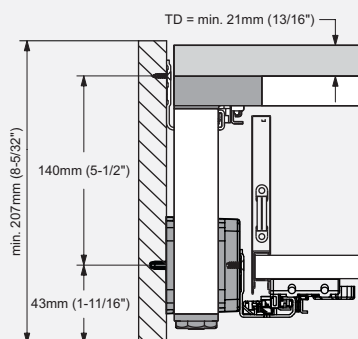


i TD = Step board thickness (including anti-slip material)

Front panel dimensions for screw-on installation

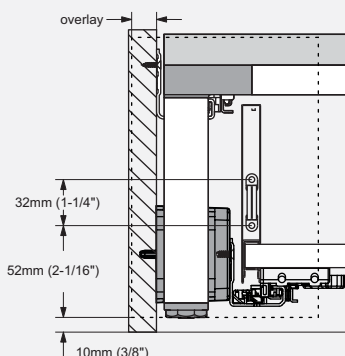


Front panel drilling dimensions for press-in dowels

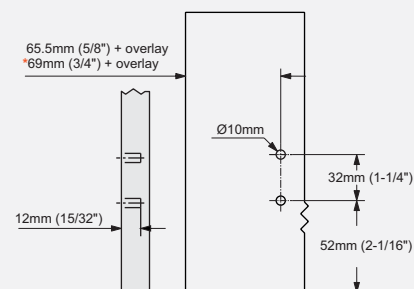

i The * asterisk number for 19mm runner thickness


LVL-3 Specifications

Runner and spacer dimensions

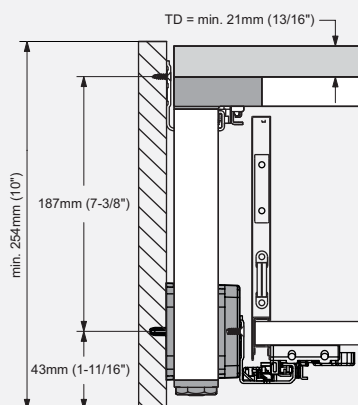


i TD = Step board thickness (including anti-slip material)

Front panel dimensions for screw-on installation

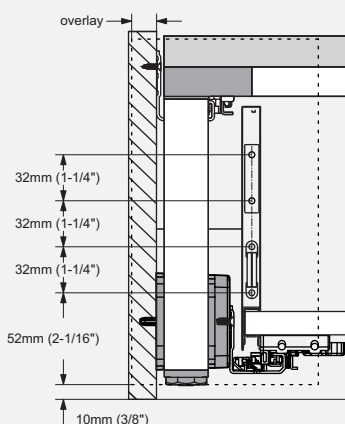


Front panel drilling dimensions for press-in dowels

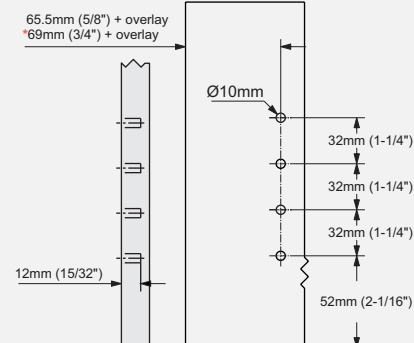



i The * asterisk number for 19mm runner thickness

Kick Step Preparations

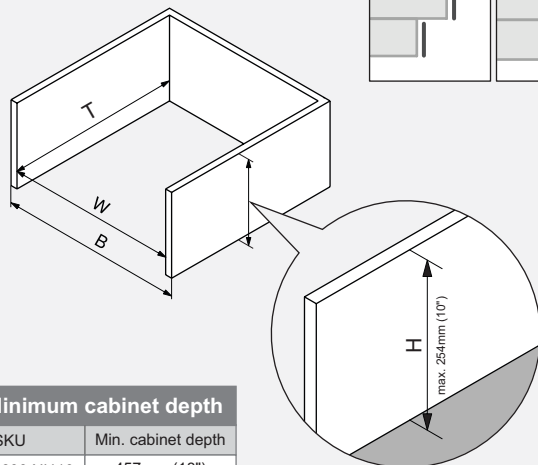







T = Minimum cabinet depth

SKU	Min. cabinet depth
TCH-23600 NI410	457mm (18'')
TCH-23600 NI460	508mm (20'')

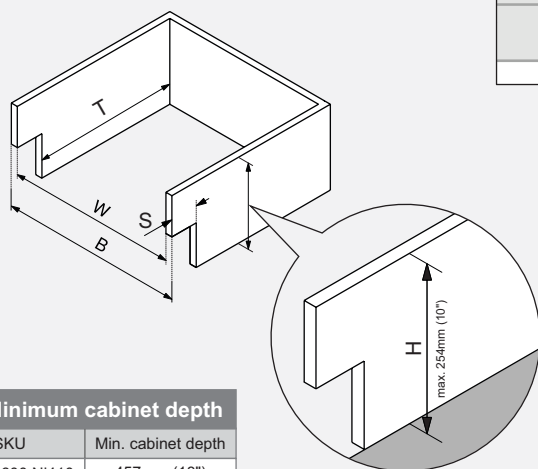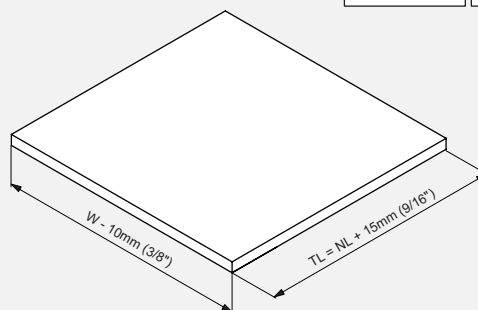


T = Minimum cabinet depth

SKU	Min. cabinet depth
TCH-23600 NI410	457mm (18'')
TCH-23600 NI460	508mm (20'')

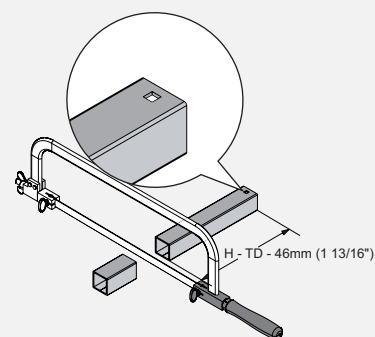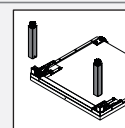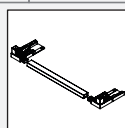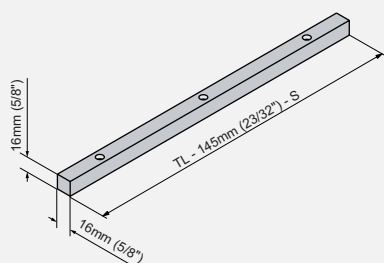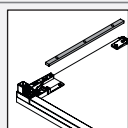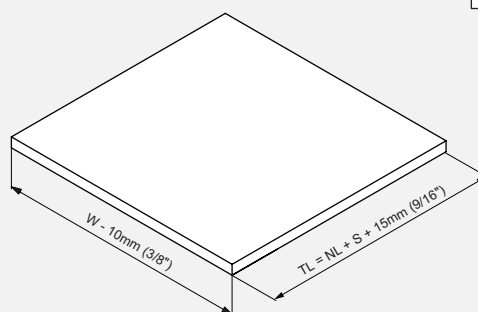



Not included - to be manufactured


Kick Step Installation instructions

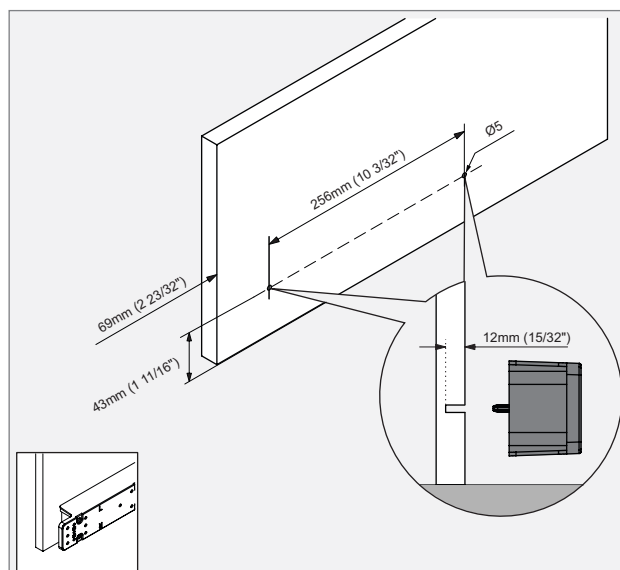


1

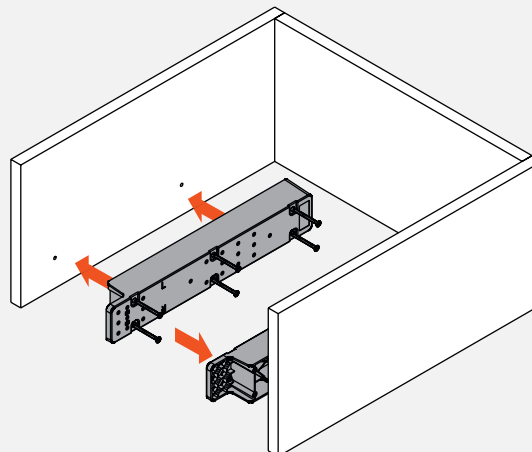


 (4 X 60)

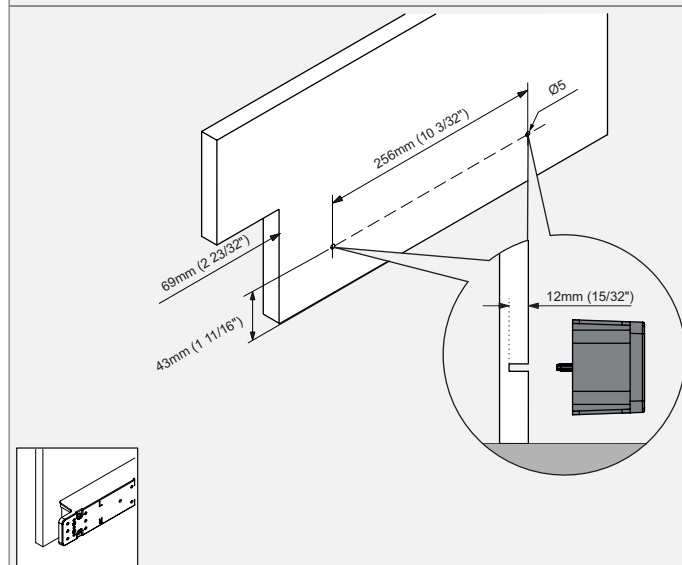


1

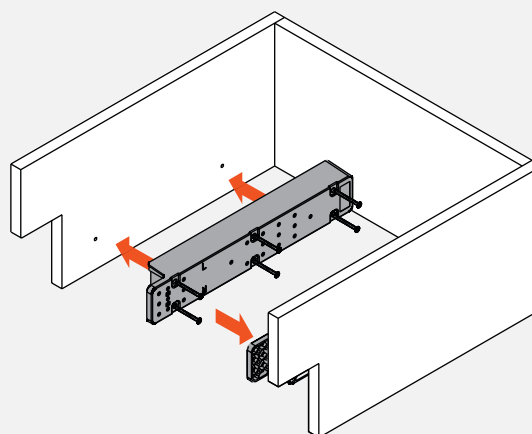


 (4 X 60)

2

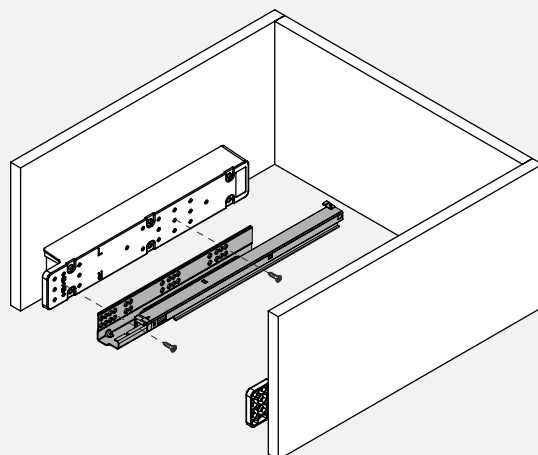

 (3.5 X 10)

3

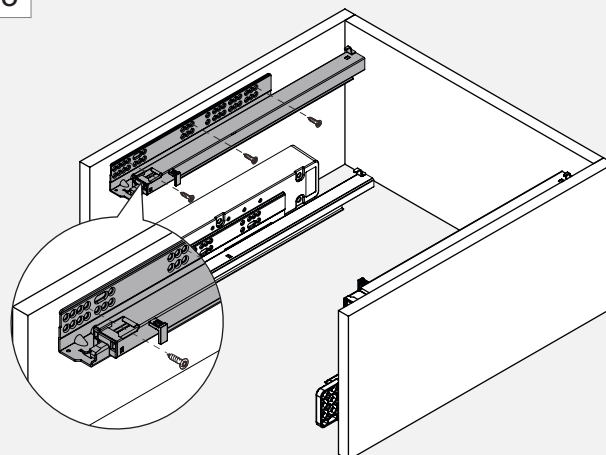


 (3.5 X 15)


Kick Step Installation instructions




4

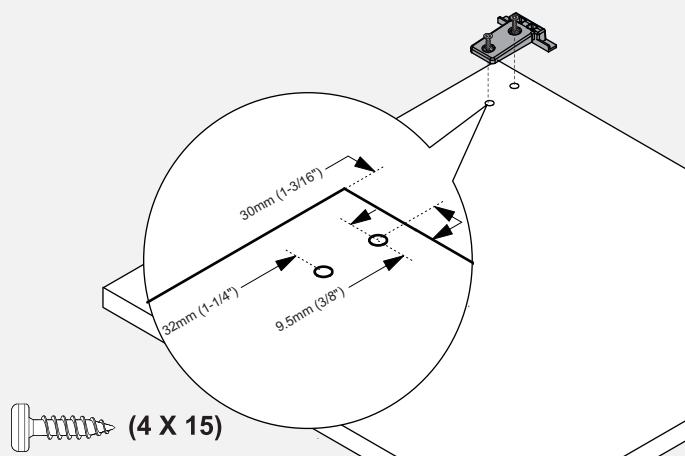


5

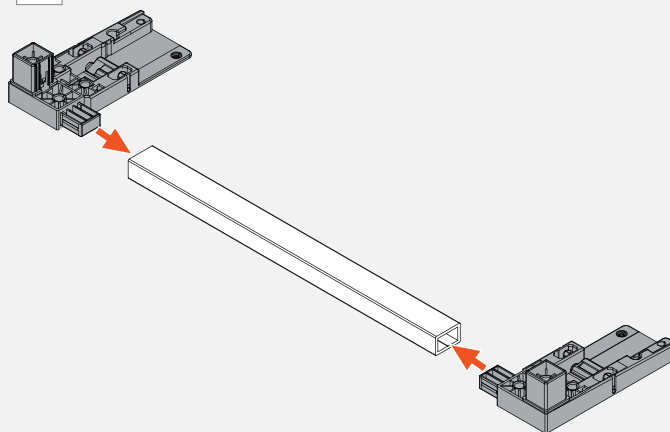

6

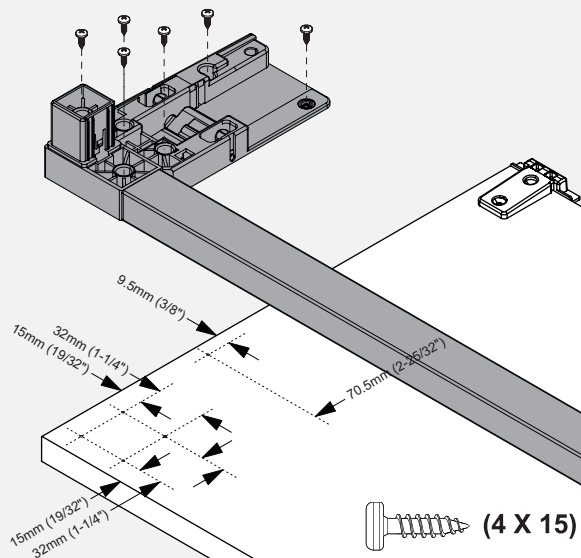


7

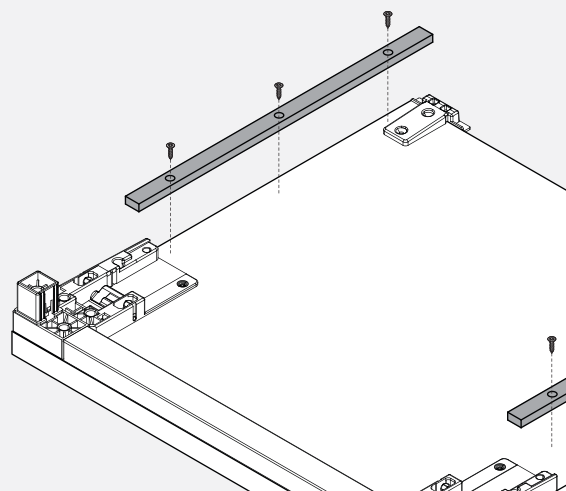

8




9

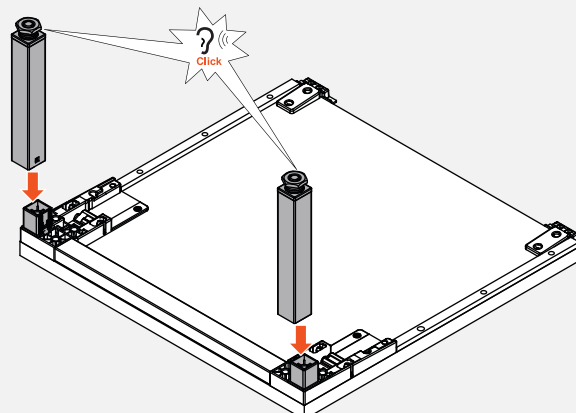


Kick Step Installation instructions




10

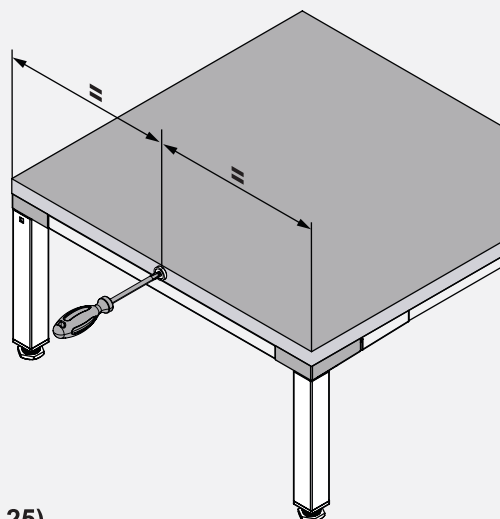



 (3.5 X 25)

11

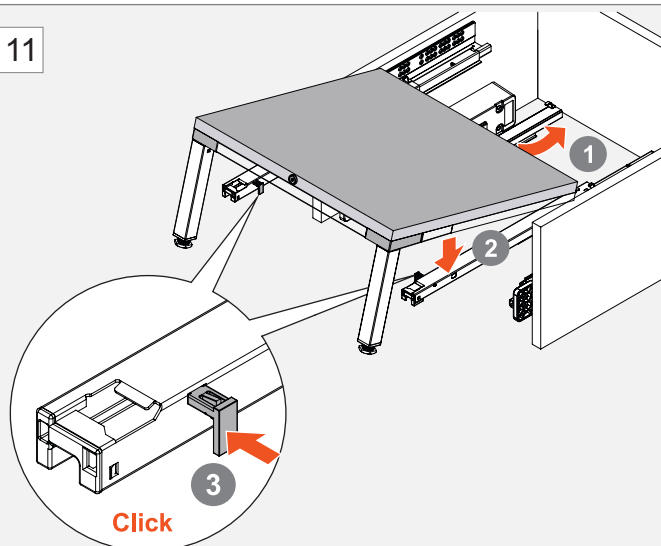


12

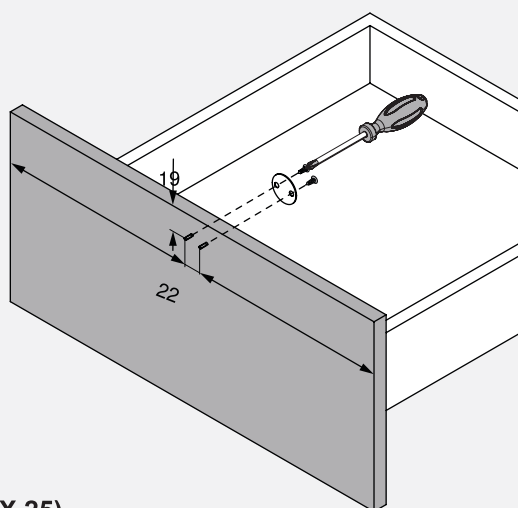

 (3.5 X 25)

13

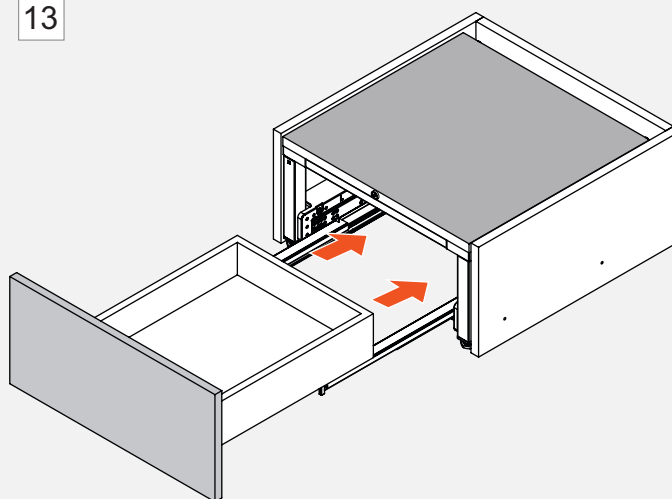

i

